

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be taken, including the following:

READ ALL INSTRUCTIONS BEFORE USING

DANGER — Any appliance is electrically live even when the switch is off. To reduce the risk of death by electric shock:

1. **Always unplug appliance immediately after using.**
2. Do not place or store appliance where it can fall or be pulled into a tub or sink.
3. Do not place in, or drop into water or other liquids.
4. If an appliance falls into water, unplug it immediately. **Do not reach into the water.**

 
WARNING — To reduce the risk of burns, electrocution, fire, or injury to persons:

1. **This appliance should never be left unattended when plugged in.**
2. This appliance should not be used by, on, or near children or individuals with certain disabilities. Unsupervised use could result in fire or personal injury.
3. Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.

4. Never operate this appliance if it has a damaged cord or plug, if it is not working properly, or if it has been dropped or damaged, or dropped into water. Do not attempt to repair the appliance. Incorrect reassembly or repair could cause a risk of fire, electric shock, or injury to persons when the appliance is used. Return the appliance to an authorized service center for examination and repair.
5. Keep the cord away from heated surfaces. Do not allow cord to touch heated surfaces. Do not pull or twist cord. Let appliance cool completely before putting away.
6. To reduce the risk of electric shock, this appliance has a polarized plug (one blade is wider than the other). This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician to install the proper outlet. Do not change the plug in any way.
7. Never drop or insert any object into any opening or hose.
8. Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
9. Do not use an extension cord to operate appliance.
10. Surfaces of this appliance may be hot when in use. Do not let heated surfaces touch eyes or skin.
11. Do not place the steam nozzle directly on any surface or on the appliance power cord while it is hot or plugged in. Use the stand provided.
12. Unplug this appliance before filling or emptying. Do not overfill.

13. While emitting steam, this appliance may cause burns if it is used too close to the skin, scalp or eyes, or if it is used incorrectly. To reduce the risk of contact with hot water discharging from steam vents, test appliance before each use by holding it away from body.
14. Do not operate steamer without properly filling the water tank.
15. Always keep the hose and nozzle elevated above the water tank.
16. Never yank cord to disconnect from outlet. Instead, grasp plug and pull to disconnect.
17. Burns could occur from touching hot metal parts, hot water, or steam. Use care when removing water tank or when you turn a steam appliance upside down — there may be hot water in reservoir.
18. To reduce likelihood of circuit overload, do not operate another high-wattage appliance on the same circuit.
19. If an extension cord is absolutely necessary, a 15 ampere rated cord should be used. Cords rated for less amperage may overheat. Care should be taken to arrange the cord so that it cannot be pulled or tripped over.
20. Always remove the water tank from the appliance before filling it with water.
21. When changing attachments, please be sure the unit is off and no steam is being released in order to avoid contact with hot water.
22. Use caution when changing attachments, as there may be hot water from condensation. Ensure the attachments are dry or cooled off, to avoid contact with hot water.

GET TO KNOW YOUR STEAMER

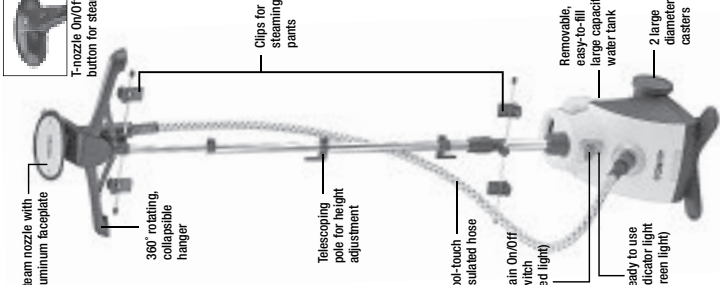

SAVE THESE INSTRUCTIONS FOR HOUSEHOLD USE ONLY

UNPACKING INSTRUCTIONS
Place the box on a large, sturdy flat surface. Carefully remove the appliance from the packing material. Keep all plastic bags away from children.

STEAMER ASSEMBLY
Attaching the Telescopic Pole and Rotating Hanger

1. Turn the lock on top of base unit to unlock position and place telescopic pole into opening. Turn clockwise to lock.
2. Fully extend the telescopic pole, making sure to lock the pole upright by engaging the two clips, and hang the steam nozzle from the cradle atop the 360 degree rotating hanger assembly.
3. Pull lower pants clips towards you and rotate clockwise to lock into place.
4. This unit comes with a rotating hanger. To use the hanger, simply place on top of pole firmly. Then tighten lower nut to keep hanger upright or untighten to collapse hanger. It is now in place to rotate 360°. Hang your garment and steam away wrinkles. Turn as you wish.
5. Attach the top pants clip bar to the rotating hanger by inserting mounting pegs into the hanger's two keyhole openings. Push in and pull down to lock. **See instruction booklet "Using pant clip system", Fig.3 for more details.**

6. With telescopic pole now fully assembled, place the T-Nozzle onto holder above the hanger.
7. When you are ready to steam, fill the water tank from the top opening. Note, do not open the bottom cap as this is used for cleaning or removing excess water only.
8. Plug the steamer unit into a standard 120V AC power outlet.
9. The bristle brush attachment easily snaps over the T-nozzle for use. To use the creaser attachment, simply line up at base and slide into back under T-nozzle and push firmly to attach. **See instruction booklet "Attachments" section figures 5 and 6 for more details.**

 
TURNING STEAMER ON

1. Push the On/Off switch on base of unit to On – red light will go on (A).
2. The unit will heat up in approximately 100 seconds and will be ready to use when green light is on (B).
3. Push button on T-nozzle – light will go on and steam will start. Button on T-nozzle can be used On or as a Pause feature.

Always hold the nozzle about ½ inch from fabric while steaming.


USING PANT CLIP SYSTEM

This fabric steamer is equipped with a pant clip system for holding pants taut for faster and more effective steaming.




(Fig. 3)

 Attach the top pants clip bar to the rotating hanger by inserting mounting pegs into the hanger's two keyhole openings (Fig. 3). Push in and pull down to lock (as highlighted above).

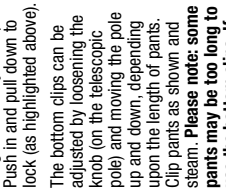

 The bottom clips can be adjusted by loosening the knob (on the telescopic pole) and moving the pole up and down, depending upon the length of pants. Clip pants as shown and steam. **Please note: some pants may be too long to use the bottom clips. If that is the case, just simply use the top clips and let your pants hang freely.**

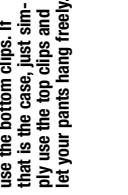

(Fig. 2)


OPERATING INSTRUCTIONS

FILLING THE WATER TANK (PRIOR TO PLUGGING IN THE APPLIANCE)

Remove the water tank using handle on front of tank. Fill reservoir using opening on top of tank by holding it under a source of cold running water until it is filled to the desired level. Do not overfill. Position the water tank on the base and make certain it is seated properly in the unit.



 (Fig. 5)

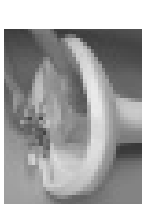

Bristle brush attachment

DO NOT FILL THE TANK WITH HOT WATER. DISTILLED OR FILTERED WATER IS BEST.

Do not unscrew the bottom cap unless for cleaning (Fig. 4). Note, be sure always empty or fill the tank over a sink, being careful not to spill water from the top of the tank.



(Fig. 4)

ATTACHMENTS

The bristle brush attachment easily snaps over the T-nozzle as shown below (Fig. 5). For the creaser attachment, simply line up at base and slide into back under T-nozzle and push firmly to attach as shown below (Fig. 6). **Make sure your steamer is off and has cooled before adding or removing attachments.**



(Fig. 5)



(Fig. 6)



Creaser Attachment

CLEANING AND STORING

1. Turn the On/Off switch to the Off position and unplug from the power source.
2. Wait for the steamer to cool completely for at least 30 minutes.
3. Remove the water tank from unit, open bottom cover and empty unused contents. Allow to air dry.
4. Collapse telescopic hanger pole.
5. Replace water tank.
6. Store the unit.

DECALCIFICATION

If the appliance begins to produce steam more slowly than usual or stops producing steam and then starts again, you may need to decalcify your steamer. Decalcification refers to removing the calcium deposits that form over time on the metal parts of the steamer. For best performance from the Conair® Extreme Steam™ Fabric Steamer, decalcify the unit once a month. The frequency depends upon the hardness of your tap water and how often you use the steamer.

To decalcify, add a solution of 1/3 white vinegar and 2/3 water in the water tank. Place the water tank in the unit. Plug the unit into electrical outlet. Turn to the On position and run until half the amount has steamed (1 liter). Turn the unit to the Off position, unplug from electrical outlet, and allow to sit for 30 minutes.

Always steam with hose in upright position, so any condensation is free to flow back into the steamer. Always hold the nozzle about ½ inch from fabric while steaming.

If you steam in a low position, condensation will collect inside the hose. This will cause gurgling and some water droplets to form near the steam jets on the handle. To avoid this, frequently lift the steam handle upward until the hose is extended to its full height.

TO STEAM DRAPES

Wash and dry drapes as directed, according to fabric type. Rehanging drapes and steam when they are in place.

CAUTION: Hose will be hot when in use. Avoid prolonged contact.

TROUBLESHOOTING THE STEAMER

- **PROBLEM** - Steamer fails to heat
CAUSE - Steamer not plugged in
SOLUTION - Plug into electrical outlet
- **PROBLEM** - No steam
CAUSE - Water level is low (beep will sound)
SOLUTION - Turn On/Off switch off and refill water tank
- **PROBLEM** - Water drips from nozzle
CAUSE - Condensation in hose
SOLUTION - Hold the hose vertically and allow water to drain back into unit
- **PROBLEM** - Nozzle gurgles
CAUSE - Condensation in hose
SOLUTION - Hold the hose vertically and allow water to drain back into unit
- **PROBLEM** - Poor steam performance
CAUSE - Sediment in tank
SOLUTION - Decalcify reservoir and water tank. See decalcification instructions.
- **PROBLEM** - Dye on T-nozzle
CAUSE - Fabric not colorfast / Touching T-nozzle to fabric
SOLUTION - Move T-nozzle 1/2 inch away from fabric during use. Clean T-nozzle with household cleaner and rinse with soap and water
- **PROBLEM** - Discoloring of fabric
CAUSE - Dye on surface of fabric needs specialty treatment and cleaning / Fabric not suitable for steaming
SOLUTION - Some custom specialty fabrics have dyes that are NOT COLORFAST and are not suitable for steaming. Test fabric for colorfastness in an inconspicuous spot before steaming.

NOTE: Amounts of chemicals in water will vary in different areas. To ensure continued operation of the steamer, never store without cleaning and removing excess water from the reservoir and water tank.

LIMITED ONE-YEAR WARRANTY

Conair will repair or replace (at our option) your unit free of charge for 12 months from the date of purchase if the appliance is defective in workmanship or materials.

To obtain service under this warranty, return the defective product to the service center listed, together with your purchase receipt and \$3.00 for postage and handling. California residents need only provide proof of purchase and should call 1-800-366-0937 for shipping instructions. In the absence of a purchase receipt, the warranty period shall be 12 months from the date of manufacture.

ANY IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED IN DURATION TO THE 12-MONTH DURATION OF THIS WRITTEN, LIMITED WARRANTY. Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.

IN NO EVENT SHALL CONAIR BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER.

Some states do not allow the exclusion or limitation of special, incidental, or consequential damages, so the above limitation may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state.

Instructions for Use

For your safety and continued enjoyment of this product, always read the instruction book carefully before using.

Please register this product at:
www.conair.com/registration

Service Center
Conair Corporation
Service Department
7475 N. Glen Harbor Blvd.
Glendale, AZ 85307

 
For information on any Conair product call:
1-800-3-CONAIR or visit us on the web at
www.conair.com

©2013 Conair Corporation
East Windsor, NJ 08520/Glendale, AZ 85307

13PA140688

IB-12095

EXTREME STEAM™
FABRIC STEAMER
with **DUAL HEAT**

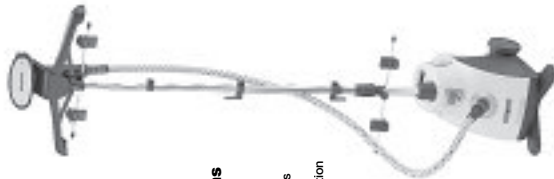

CONAIR®
Model GS95